

Disassembly tool FSU-DT



 

DE Bedienungsanleitung
EN Operating instructions
FR Manuel d'utilisation
NL Gebruiksaanwijzing
IT Manuale d'uso
ES Manual de instrucciones
PT Instruções de utilização
DA Betjeningsvejledning
SV Bruksanvisning

 

NO Bruksanvisning
FI Käyttöohje
PL Instrukcja obsługi
CS Návod k obsluze
SK Používateľská príručka
HU Használati útmutató
RO Instrucțiuni de utilizare
SL Navodila za uporabo
HR Priručnik za rad

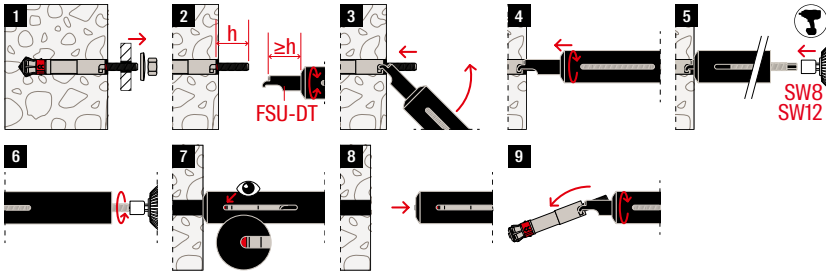
TR Kullanım Kılavuzu
EL Εγχειρίδιο χρήσης
BG Инструкции за работа
RU Руководство по эксплуатации
ZH 操作说明
JP 取扱説明書
KO 작동 지침

Strong Undercut Anchor FSU

Pre-setting anchor

 
 
			
567778	FSU M10x100/20	568879	FSU-DT M10
567779	FSU M10x100/20 R		
567782	FSU M12x125/30	568880	FSU-DT M12
567783	FSU M12x125/30 R		
567786	FSU M12x125/50		
567787	FSU M12x125/50 R		

 
 
			
573380	FSU M16x190/40	575610	FSU-DT M16
573384	FSU M16x190/40 R		
573381	FSU M16x190/60		
573385	FSU M16x190/60 R		

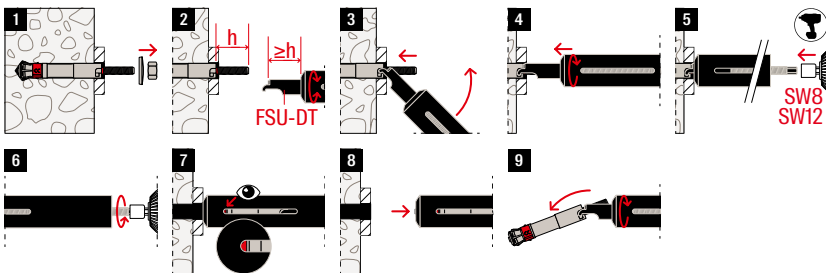


Strong Undercut Anchor FSU-P

Push-through anchor

			
567780	FSU-P M10x100/20	568879	FSU-DT M10
567781	FSU-P M10x100/20 R		
567784	FSU-P M12x125/30	568880	FSU-DT M12
567785	FSU-P M12x125/30 R		
567788	FSU-P M12x125/50		
567789	FSU-P M12x125/50 R		

			
573382	FSU-P M16x190/40	575610	FSU-DT M16
573386	FSU-P M16x190/40 R		
573383	FSU-P M16x190/60		
573387	FSU-P M16x190/60 R		



fischer 

fischerwerke GmbH & Co. KG
 Klaus-Fischer-Straße 1 · 72178 Waldachtal
 Germany
 P +49 7443 12 - 0
www.fischer-international.com · info@fischer.de